

STRATOS UNLOADING NOTICE


Please be advised. You should always use a 'Spreader Beam' when lifting your Stratos distributor unit. This will prevent the lift eyes from bending. The lift eyes will bend inward if the upward force is from the middle. If your distributor is insulated, this will bend the outer aluminum shell, and the shell can't be repaired. We appreciate your business. Thank you.

Distance between Lift Eyes (subject to change, measure before you lift!):

DMT-400, 58" (147cm)

DMT-600, 78" (198cm)

DMT-1000, 84" (213cm)

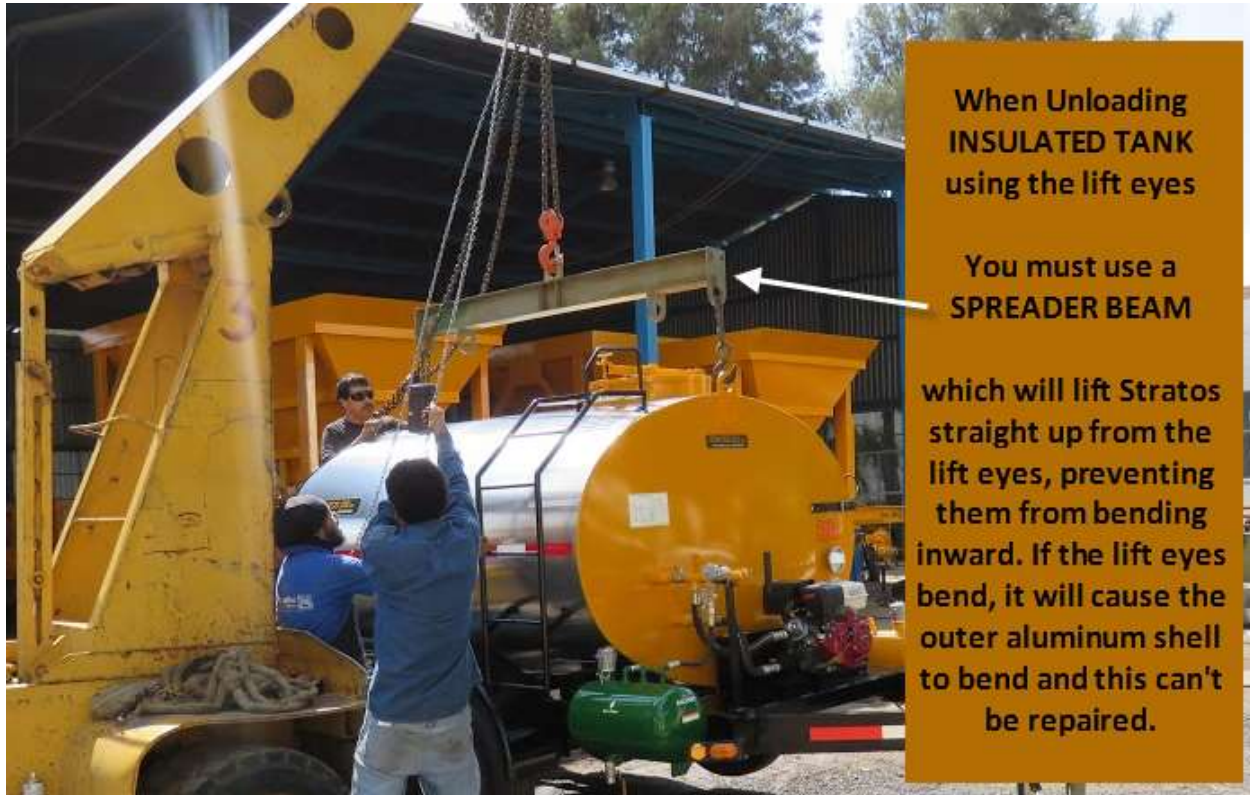

Additional Questions? We are glad to help you!

Please call PavementGroup.com Technical Support M-F 9-5 EST, 518-218-7676